



\*NOTE: If you want to play regular Vinyl, select: Mode1/THRU and switch the mixer channel to „Phono“

\*\*NOTE: If you want to play regular Audio-CD, select: Mode1/THRU and switch the mixer channel to „Line“

## SWITCHBOX Digital-DJ Manual

How to connect the Switchbox to the Audio-Interface / Scratch-Amp / Vinyl Box etc...

### Switchbox Interface A/B

### Serato

---

Phono 1	➔	Input 1
Phono 2	➔	Input 2
Line 1	➔	Line 1
Line 2	➔	Line 2

### Switchbox Interface A/B

### Traktor Scratch

---

Phono 1	➔	In 1/2
Phono 2	➔	In 3/4
Line 1	➔	Out 1/2
Line 2	➔	Out 3/4

### Switchbox Interface A/B

### Final Scratch

---

Phono 1	➔	In 1
Phono 2	➔	In 2
Line 1	➔	Out 1
Line 2	➔	Out 2

### Switchbox Interface A/B

### Torq Conective Vinyl

---

Phono 1	➔	Input 1
Phono 2	➔	Input 2
Line 1	➔	Output 1
Line 2	➔	Output 2

### Switchbox Interface A/B

### Numark Vinyl Control

---

Phono 1	➔	Input 1
Phono 2	➔	Input 2
Line 1	➔	Output 1
Line 2	➔	Output 2